


The Urban 1200 MK II vanity is designed to complement contemporary interiors with its unique, flexible and practical design. Intended to suit a wide variety of bathroom environments and applications, the distinctive slimline solid surface basin with its generous bench space and a sleek finger pull detail on the cabinet offers an exclusive and luxurious feel.

Offering a left hand bowl and soft close drawers the Urban 1200 MK II is available in three luxurious finishes, each with adjustable internal dividers. It can be ordered with or without a tap hole and is supplied with a polished chrome pop up plug and waste and compact pvc p trap for plumbing.

In Australia, the Urban MK II range is available exclusively through Reece Bathrooms.

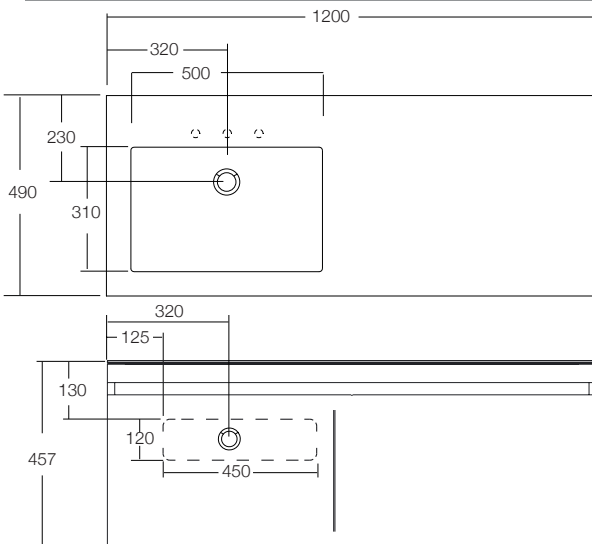

FRONT ELEVATION
BACK PANEL CUT OUT - - - - -



Dimensions

Width: 1200mm
Depth: 490mm
Height: 457mm

Bowl Dimensions: 500mm (w) x 310mm (d)
Capacity: 16 litres

Features

Finishes:



Oak



Matt white powder coat



Matt storm grey powder coat

Internal drawer finish:



Grey linen

Material: White solid surface slimline inset basin
Timber laminate on HMR board cabinet or Powder coat on HMR board cabinet
Laminate on HMR board internal drawer

Drawers: Soft close drawer
Includes adjustable internal divider

Handles: Finger pull

Overflow: No

Tapholes: 0, 1 or 3

Waste Size: 32mm

Waste Supplied: Yes, with a 40mm pvc micro trap

Cleaning

Solid surface:

Spills should be cleaned up promptly. Clean with a mild detergent or soapy water and soft cloth. For more stubborn marks use a diluted very mild non coloured abrasive cleaner with a soft cloth in light circular motions over the entire surface. Finish by cleaning off detergents with a soft wet cloth and towel dry.

Avoid using bleach, highly acidic products and coloured abrasive cleaners on your basin.

Powder coat and laminate:

Never allow water or liquids to sit on your timber cabinetry. Always clean spills and water immediately. Clean with a mild, non-acidic, non-abrasive cleaner and soft cloth. Finish by cleaning off detergents with a soft damp cloth and towel dry. Avoid using bleach, highly acidic products and coloured abrasive cleaners on your vanity.